


566 FUEL FILTER WARNING CIRCUIT

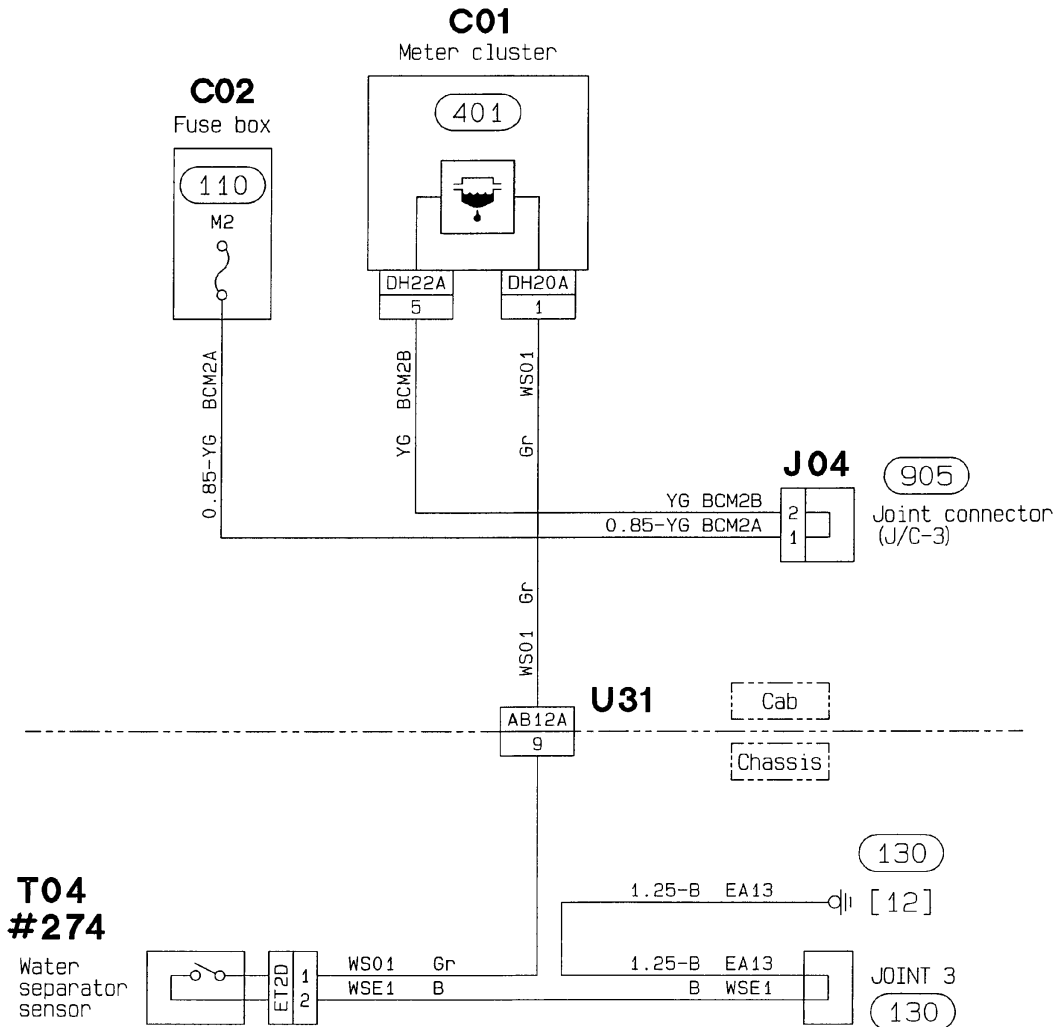

If the accumulated water exceeds the specified limit, the switch turns ON